

Quick Installation Guide



Wireless Presentation Solution

For User

Start sharing your screen with ASTROS App

Download

Windows / macOS

Go to [Astrogate.app](https://astrogate.app) website to download the ASTROS App for your device.

iOS / Android

Search for **ASTROS App** in App Store or Google Play.

Connect

Station name
MeetingRoom-01

Station IP
192.168.100.100

Login code
1 3 5 7

Download ASTROS App
[Astrogate.app](https://astrogate.app)

Station list

Station name or IP address

GO

★ BoardRoom

ON

★ MeetingRoom-01

ON

★ MeetingRoom-02

OFF

★ MeetingRoom-03

OFF

❶ Launch the **ASTROS App**.

❷ On the **Station list**, find the “**Station name**” shown on the **Standby Screen**.

ⓘ If the name does not appear on the **Station list**, switch your **Wi-Fi** to the network with the same name (SSID) as the **Station name**.

❸ Click the **toggle** to connect to the right **Station**.

Present

MeetingRoom-01

Login code

Cancel

Ok

Type in the login code.

★ MeetingRoom-01

Connected

⋮

Click play button to start screen sharing.

Thank you for choosing Astrogate product.
For product support, please contact our partner or e-mail to
service@astrogate.com

For Installer

Install and configure your ASTROS Station



Package contents

- ASTROS Station × 1
- Antenna × 2
- Quick Installation Guide × 1
- Power adapter (12V 2A) × 1

ASTROS Station overview


- 1 Power button*
- 2 USB Type-C
- 3 USB 3.0 Type-A

*Power button function


Enter / quit Sleep or Suspend mode : short press for 1 second
Factory reset : long press until "Restarting..." dialog appears on screen

*Power button LED behavior

Red: sleep mode **Blue**: power on **Blinking red and blue**: firmware updating

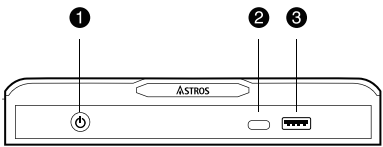


- 4 Antenna connectors
- 5 Audio out
- 6 HDMI 1.4 out
- 7 USB 2.0 Type-A
- 8 VGA out
- 9 Ethernet port 10/100/1000 with PoE
- 10 Power port

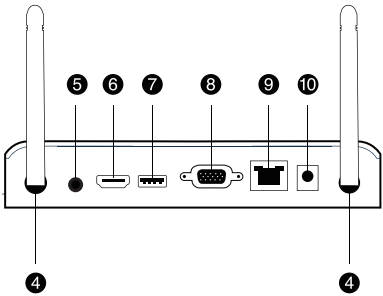

Installation guide

Wall mounting

- 1 Drill two holes in the wall with the distance of 140 mm.
Use screw anchors if needed.
- 2 Drive in two screws.
The screw head size must be between 3.3 and 6 mm.
The screw rod diameter must be smaller than 3.3 mm.
Do not drive in the screws completely.
- 3 Hang the ASTROS Station to both screw heads and slide downwards until it is fixed.

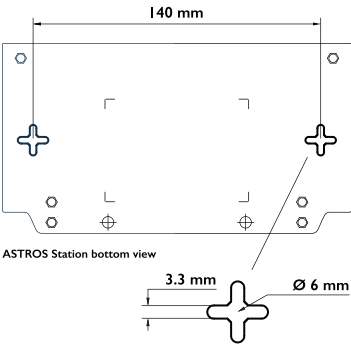


- 1 Connect to a display with a HDMI or VGA cable.
If the display supports touch, also connect a USB cable.
- 2 Connect the Ethernet cable.
- 3 Connect a mouse.
Optional
- 4 Connect the power adapter.
ASTROS Station will automatically turn on without pressing the power button.

Connect cables

- 1 Make sure your laptop and ASTROS Station are on the same network.
- 2 Type in **https:// + Station IP** in a web browser.
Station IP can be found on the information panel of the Standby Screen.
- 3 Type in configuration page password.
The password is **admin** by default.

① "https://" in URL is necessary for the browser to direct to the ASTROS configuration page correctly.

① For security purpose, please change the default password of your Station.

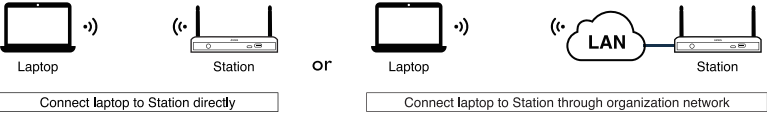

① **https:// + Station IP** in a web browser.
example: **https://192.168.120.11**

Access ASTROS configuration page

For in depth configuration information, please visit :
astrogate.com/download/astros/user_manual.pdf