





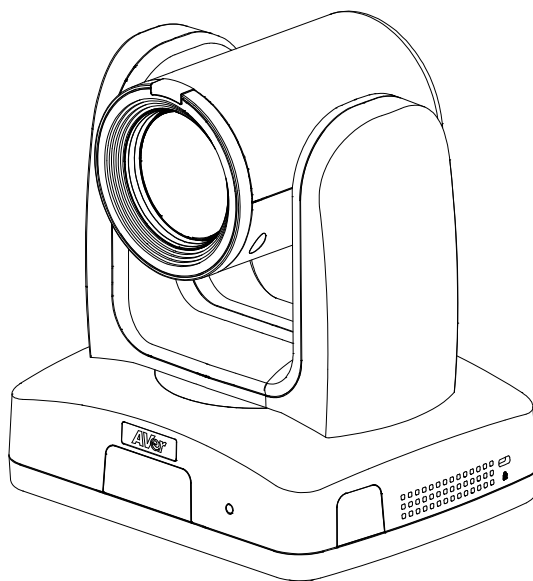


Professional PTZ Camera

— User Manual —

PTZ211 / PTZ310UV2 / PTZ310UNV2
PTZ231 / PTZ330UV2 / PTZ330UNV2

Warning

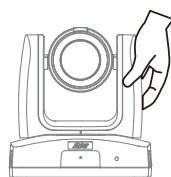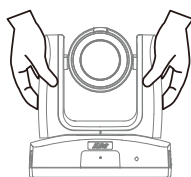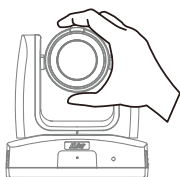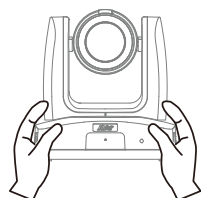

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Warranty will be void if any unauthorized modifications are done to the product.
- Do not drop the camera or subject it to physical shock.
- Use the correct power supply voltage to avoid the damaging camera.
- Do not place the camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- Hold the bottom of the camera with both hands to move the camera. Do not grab the lens or lens holder to move the camera.

Federal Communications Commission

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

PSTI Statement of Compliance

Please refer to the following website: <https://www.aver.com/product-security-advisory>

Warning

This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

VCCI-A

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

(注)本製品同梱の電源ケーブルは、本製品同梱の電源アダプタでのみ使用してください。本製品同梱の電源ケーブルは、他の電気機器では使用できません。

사 용 자 안 내 문
이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전자파간섭의 우려가 있습니다.
※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용됩니다.

기종별	사용자안내문
A 급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로합니다.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

“AVer” is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

COPYRIGHT

©2025 AVer Information Inc. All rights reserved. | January 9, 2025
All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

More Help

For FAQs, technical support, software and user manual download, please visit:

Non-USA

Download Center: <https://www.aver.com/download-center>

Technical Support: <https://www.aver.com/technical-support>

USA

Download Center: <https://www.averusa.com/pro-av/support>

Technical Support: <https://averusa.force.com/support/s/contactsupport>

Contact Information

Headquarters

AVer Information Inc.
8F, No.157, Da-An Rd., Tucheng
Dist., New Taipei City 23673,
Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc., Americas
44061 Nobel Drive, Fremont, CA
94538, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824

Europe Branch Office

AVer Information Europe B.V.
Westblaak 134, 3012 KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550

Japan Branch Office

アバー・インフォメーション株式会社
〒160-0023 日本東京都新宿区西新
宿 3-2-26 立花新宿ビル 7 階
Tel: +81 (0) 3 5989 0290
お客様サポートセンター(固定電話の
み): +81 (0) 120 008 382

Vietnam Branch Office

Công ty TNHH AVer Information
(Việt Nam)
Tầng 5, 596 Nguyễn Đình Chiểu, P.3,
Quận 3, Thành phố Hồ Chí Minh
700000, Việt Nam
Tel: +84 (0) 28 22 539 211
Hỗ trợ kỹ thuật: +84 (0) 90 70 080 77

Korea Office

한국 에버 인포메이션 (주)
서울시 종로구 새문안로 92
(신문로 1 가,
광화문오피시아빌딩) 1831,
1832 호
Tel: +82 (0) 2 722 8535


Contents

Warning	2
Overview	1
Package Contents	1
Optional Accessories	1
Parts Info	2
LED Indicators	2
Remote Control	3
Dimensions	4
Pan and Tilt Angle	6
Connection	7
Device Connection	7
PoE Connection	8
RS-232 Connection	9
RS-422 Connection	13
Audio Input Connection	15
Video Output Connection	16
Installation	17
Cable Fixing Plate Installation	17
Ceiling Mount Installation	18
Camera Installation	19
Set Up the Camera	20
OSD Menu	20
IP Address Setup	20
Static IP	20
DHCP	21
OSD Menu Tree	22
Camera	22


Video Output	24
Network	24
Advanced Setting	24
System	25
Get Started	26
Access the Web Interface	26
AVer IPCam Utility	26
AVer PTZ Management	28
Web Interface	29
Live View	29
Camera Control	29
Preset	30
Camera Settings	31
Exposure	31
Image Process	32
Video & Audio	33
Network	35
Advanced Setting	39
SmartShoot	39
SmartFrame	41
Debug Information	41
NDI	42
System	44
Audio Integrated	46
Appendix	47
VISCA RS-232 Command Table	47
Visca over IP Settings	53
CGI Command	54

Overview

Package Contents

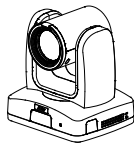


Camera



Power Adapter &
Power Cord*




Remote Control




Cable Fixing Plate



Cable Tie (x4)



Ceiling Mount Bracket
(x2)



DIN8 to D-Sub9
Cable



RS-232 In/Out
Y Cable



M2 x 4mm
Screw (x3)




1/4"-20, L=6.5mm
Screw (x2)



M3 x 6mm
Screw (x3)




Drill Template




Quick Start Guide

*The power cord may vary based on the country or region where sold.

Optional Accessories






Wall Mount Bracket



Camera Controller
(CL01)

* For details on optional accessories, please consult with your local dealer.

Parts Info

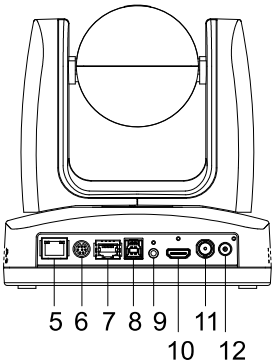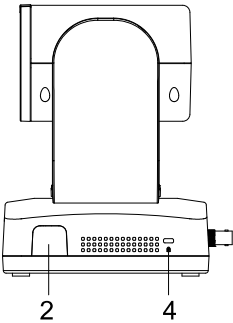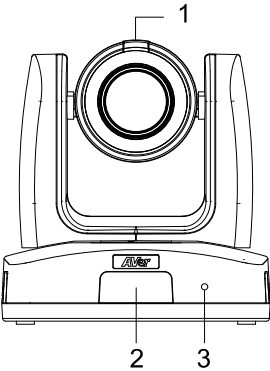

- 1. Tally Lamp
- 2. IR Sensor
- 3. LED Indicator


- 4. Kensington Lock

- 5. PoE+ IEEE 802.3AT
- 6. RS-232 Port
- 7. RS-422 Port
- 8. USB 3.0 Type-B Port
- 9. Audio In*
- 10. HDMI Port
- 11. 3G-SDI (unavailable for model names with H)
- 12. DC Power Jack

LED Indicators

Color	Status
Solid blue	Normal
Flashing red	Firmware update
Solid orange	Standby
Flashing orange	Start-up
Flashing purple	SmartShoot
Flashing blue	SmartFrame






Remote Control

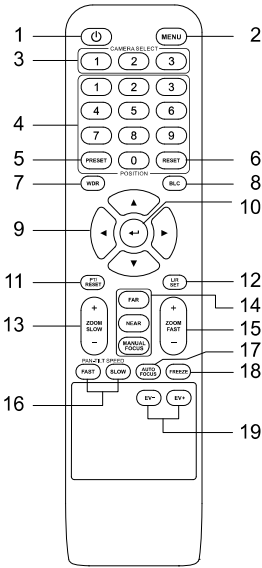





AAA Battery (x2)
(not included)

Name	Function
1. Power	Power on or enter standby mode.
2. Menu	Open and close the OSD menu during HDMI output.
3. Camera Select	No selection is required by default to operate the camera. - Both camera and remote control have been set to 1. - Specify a number in the OSD menu: System > Camera Selector.
4. Number Pad	Press number button (0-9) to move the camera to pre-configured preset position 0-9.
5. Preset	Press and hold Preset , then short press Number button (0-9) to save the preset position.
6. Reset	Press and hold Reset , then short press Number button (0-9) to reset preset position.
7. WDR	Turn Wide Dynamic Range on or off.
8. BLC	Turn Backlight Compensation on or off.
9. Directional Buttons	Press once for incremental movement or press and hold for continuous pan or tilt.
10. Enter	- Confirm a selection in the OSD menu. - Press and hold for 2 seconds for One Push Focus. - If SmartFrame has been turned on in the OSD menu or on the web interface, press and hold for 2 seconds to use SmartFrame to frame entire group on screen. Note: If SmartFrame has been turned on and you are in Manual Mode, press and hold Enter for 2 seconds to perform One Push Focus and SmartFrame together.
11. PT Reset	Reset the pan-tilt position to the center.
12. L/R SET	Invert L/R Pan Direction: Press and hold L/R SET, then short press Position 2. Reset L/R Pan Direction: Press and hold L/R SET, then short press Position 1.
13. Zoom Slow +/-	Zoom in or out slowly.
14. Far / Near / Manual Focus	Enable manual focus. Use Far/Near to adjust the focus.
15. Zoom Fast +/-	Zoom in or out fast.
16. Pan-Tilt Speed Fast / Slow	Adjust pan-tilt speed.
17. Auto Focus	Turn on Autofocus Mode.
18. Freeze	Freeze the live view.
19. EV +/-	- Short press to adjust EV level. - Long press EV+ to turn on RTMP. - Long press EV- to turn off RTMP.


Dimensions

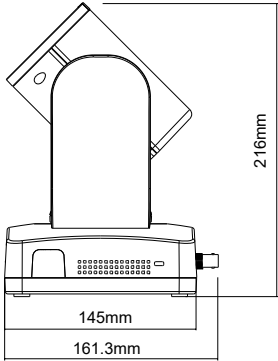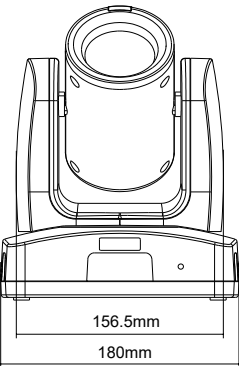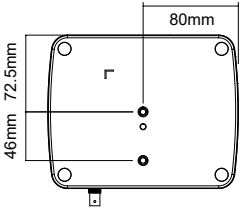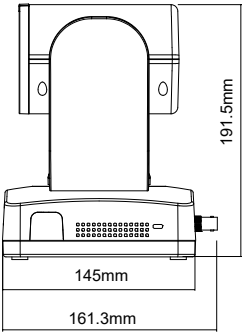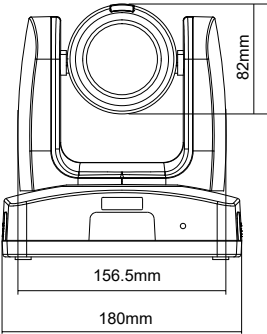


Ceiling Mount

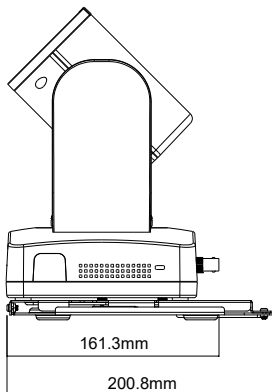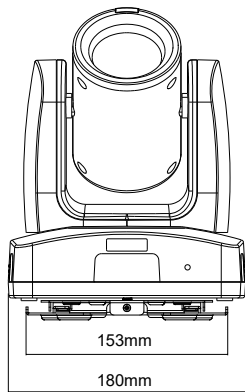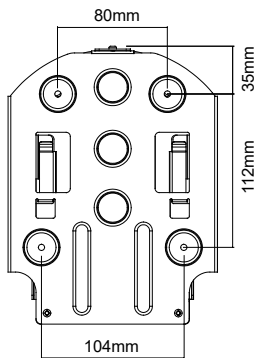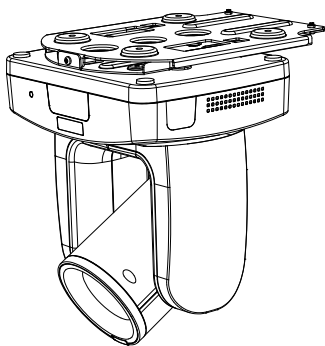

Wall Mount

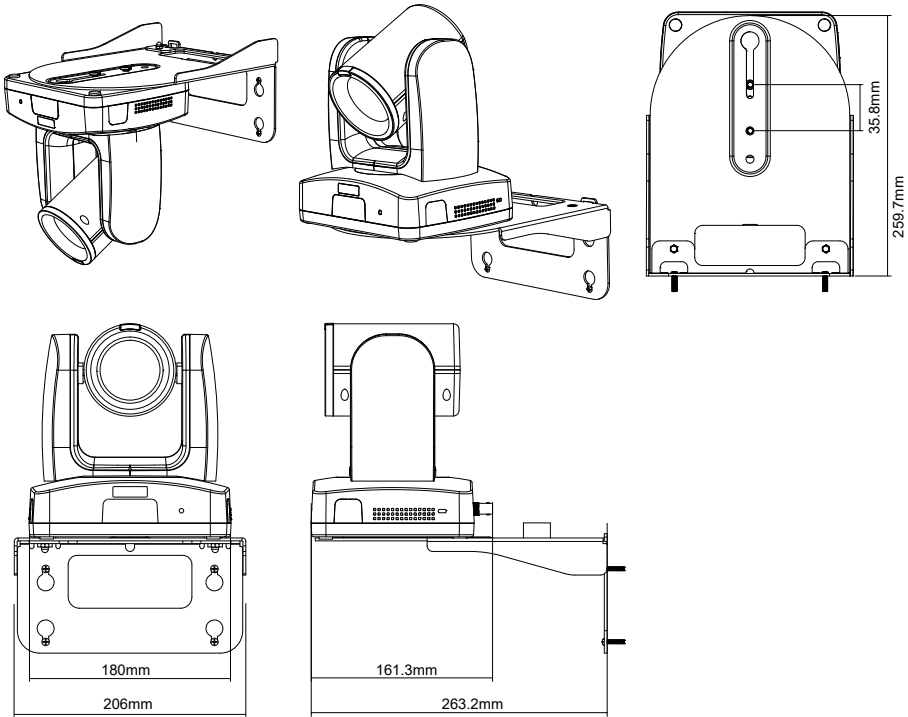


Pan and Tilt Angle

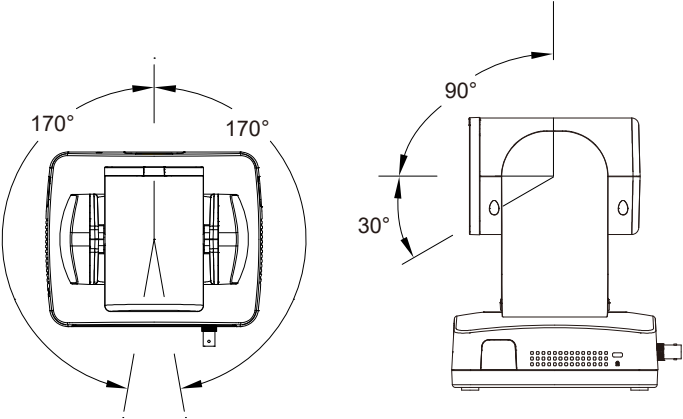

Connection


Device Connection

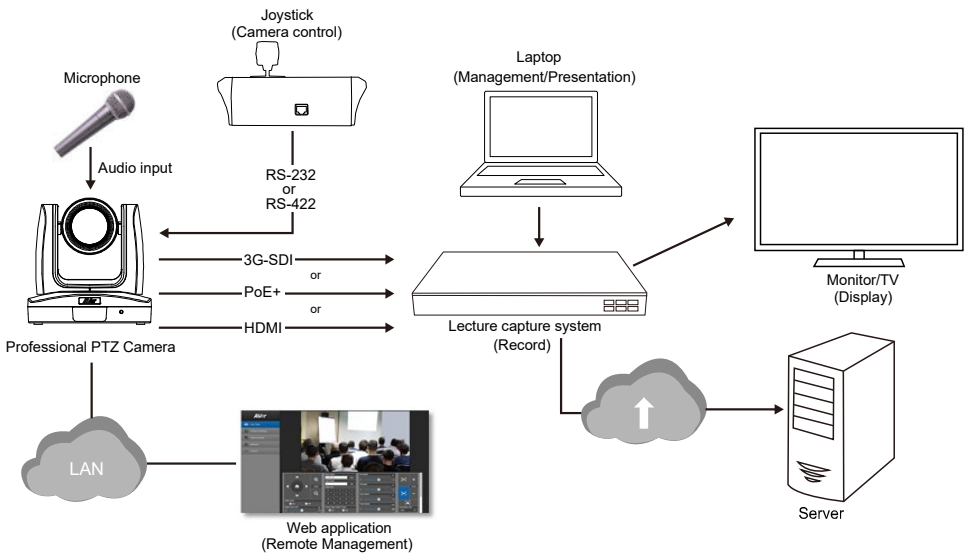

PoE Connection

Connect the camera to the router or switch through the PoE+ port.


[Note] Only support IEEE 802.3AT PoE+ standard.

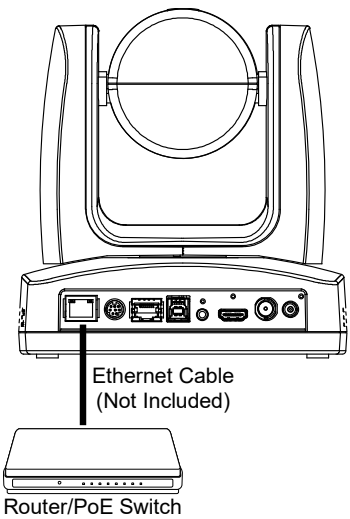


RS-232 Connection

Connect through the RS-232 for camera control.

- **RS-232**

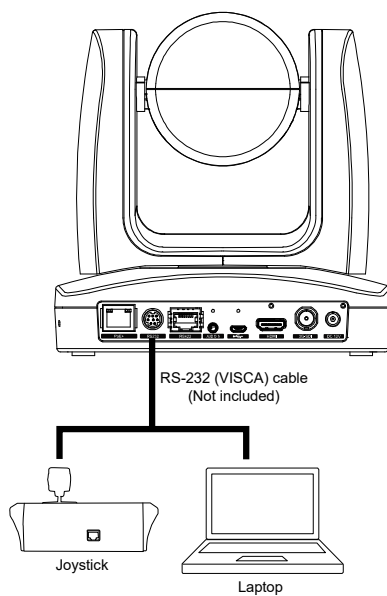


● RS-232 Port Pin Definition

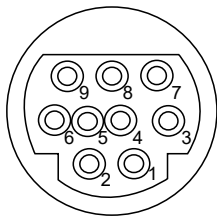


Function	Mini DIN9 PIN #	I/O Type	Signal	Description
VISCA IN	1	Output	DTR	Data Terminal Ready
	2	Input	DSR	Data Set Ready
	3	Output	TXD	Transmit Data
	6	Input	RXD	Receiver Data
VISCA OUT	7	Output	DTR	Data Terminal Ready
	4	Input	DSR	Data Set Ready
	8	Output	TXD	Transmit Data
	9	Input	RXD	Receiver Data
	5	Input	I/O	Detect DIN8/DIN9
---	Shield	---	GND	Ground


● **RS-232 mini DIN9 to mini DIN8 Cable Pin Definition**

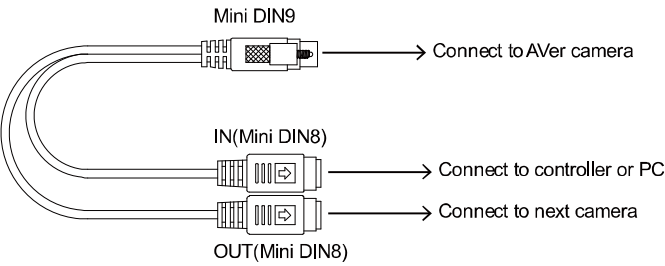

CIRCUITS:

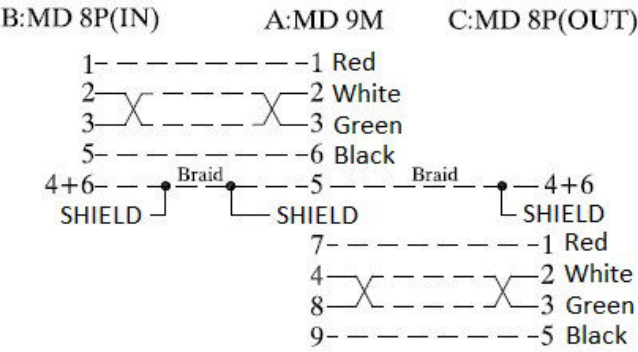


Mini DIN8 Cable Pin Definition

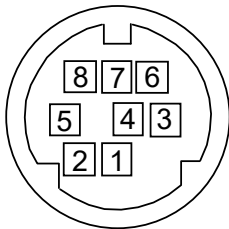


No.	Signal
1	DTR
2	DSR
3	TXD
4	GND
5	RXD
6	GND
7	NC
8	NC


● **Din8 to D-Sub9 Cable Pin Definition**

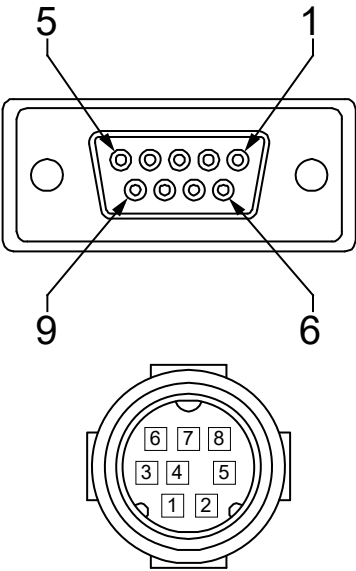

RS-422 Connection


Use an RS-422 adapter cable to make a RS-422 connection to your control device.

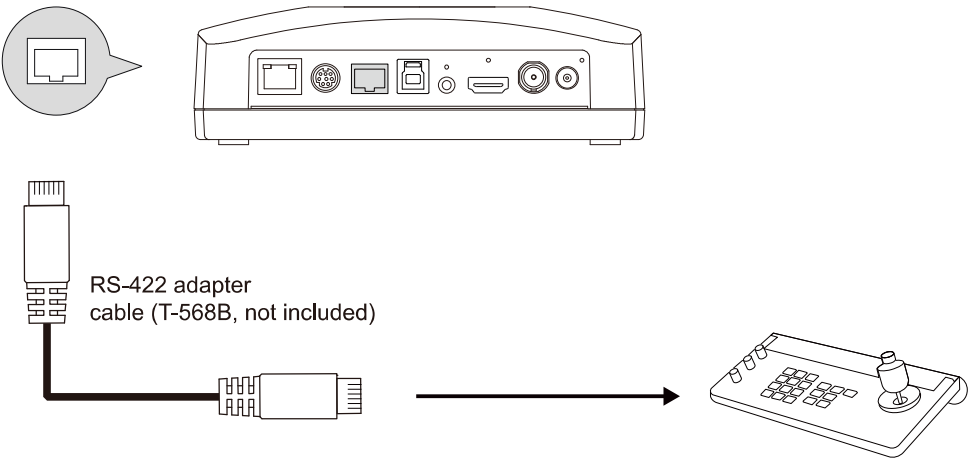

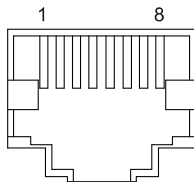


Pin #	Pin
1	TX+
2	TX-
3	RX+
4	TX+
5	TX-
6	RX-
7	RX+
8	RX-

RS-422 Port Pin Definition

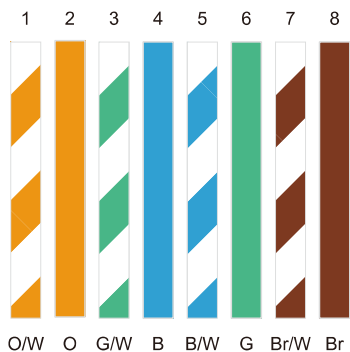

T-568B Cable

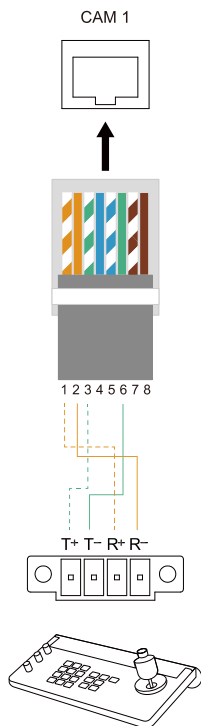


Audio Input Connection

Connect the audio device for audio receiving.

Line input level: 1Vrms (max.).


Mic input level: 50mVrms (max.); Supplied voltage: 2.5V.

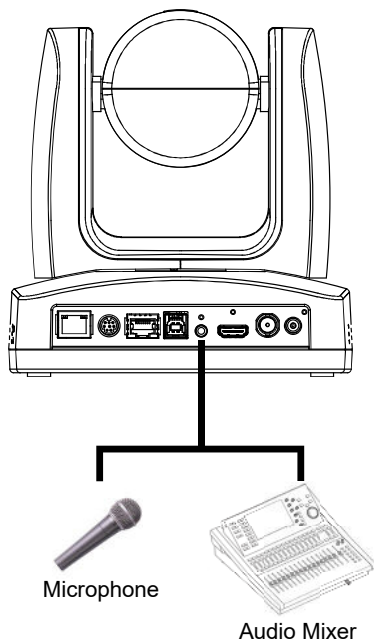

Video Output Connection


- **HDMI**

Use the HDMI cable to connect with monitor or TV for video output.

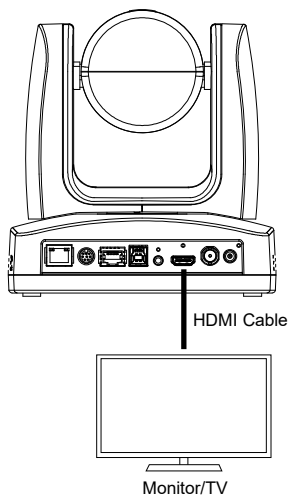

- **3G-SDI**

Connect to 3G-SDI monitor for video output.

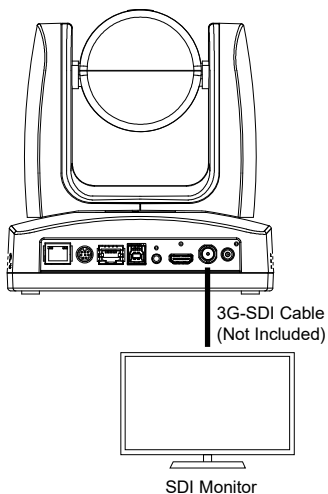


[Notes]

- HDMI and 3G-SDI monitors can be connected to camera and output live video simultaneously; Assuming HDMI monitor is well connected before the camera turned on, the OSD menu will be displayed on HDMI monitor in default.
- The model names with “H” do not have 3G-SDI.


Installation

Cable Fixing Plate Installation


1. Secure the cable fixing plate to the camera with 3 M2 x 4mm screws (included).

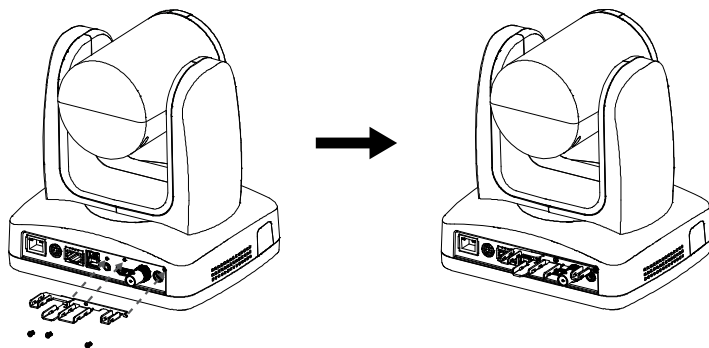

2. Plug in cables.

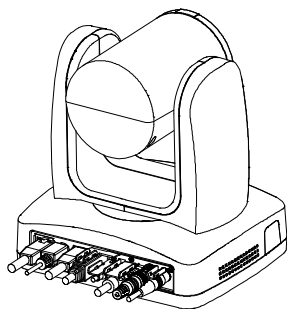


3. Use 4 cable ties to secure the cables and cable fixing plate.

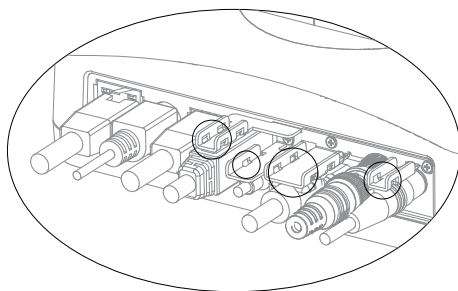


Ceiling Mount Installation


1. Secure the mount bracket on the ceiling.
Screw: 4 screws, M4 x 10mm (not Included)

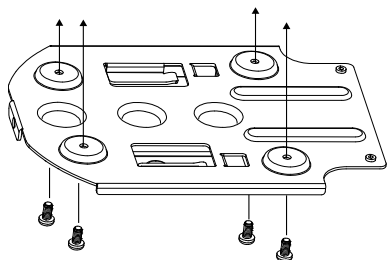


2. Install the mount bracket on the camera.
Screw: 2 screws, 1/4"-20 L=6.5mm (included)

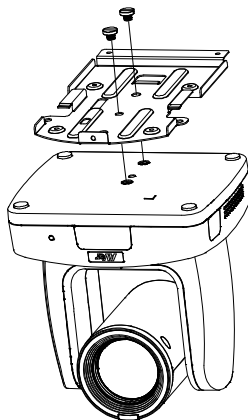

3. Slide the mount bracket with the camera into the mount bracket which secured on the ceiling.

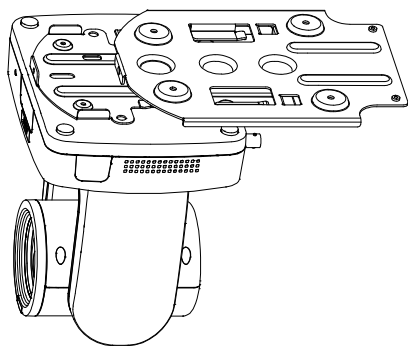

4. Secure the camera with screws.
Screw: 3 screws, M3 x 6mm (included)


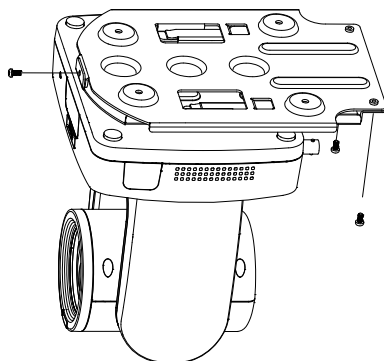


[Note] Connect necessary cables after sliding the camera into the mount bracket.

Camera Installation

- **Angle A:** less than 30°
- **Height B:** 2~3m from floor
- **Distance C:** longer than 3m away from podium
- **Position:** center of classroom
- **Distance between the camera and the target (presenter):**


Optical zoom ratio ability	Upper body size	Full body size
12X	3-16m	3-28m
16X	3-30m	4-55m
21X	3-40m	4-65m
30X	3-44m	3-76m

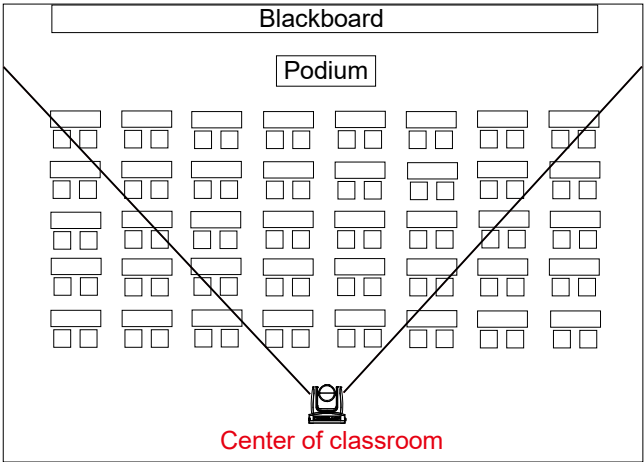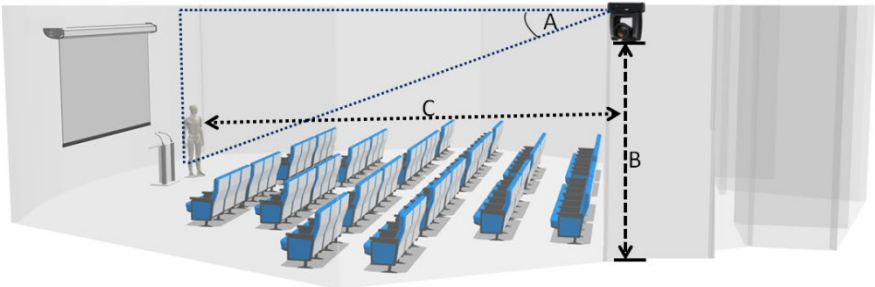

Set Up the Camera

OSD Menu


You can use the supplied Remote Control to operate the OSD Menu. Press the **MENU** button to call out the OSD menu and use the **▲**, **▼**, **◀**, **▶** and **↩** buttons to operate the OSD menu.

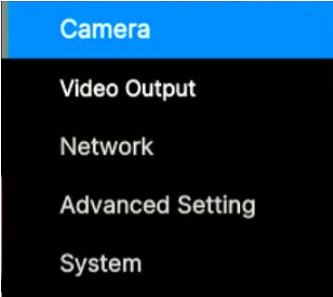

IP Address Setup


Static IP

1. Press the **MENU** button on the remote control to call out the OSD menu.
2. Go to **Network > Static IP**.
[Note] Turn the DHCP off before setting up static IP (**Network > DHCP > Off**).
3. Select the **IP Address**, **Gateway**, **Netmask** and **DNS** to configure. Press **↩** and use **◀**, **▶** and Numeric Pad to enter the data.

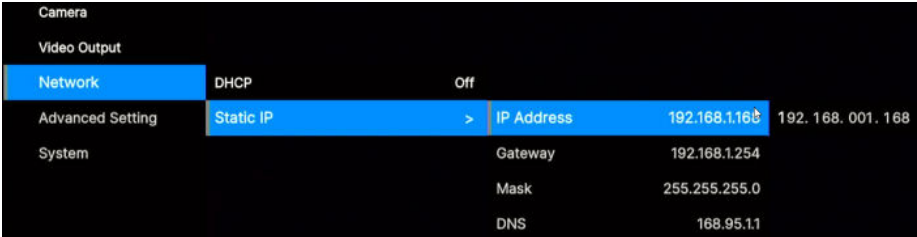


DHCP

- 1. Press the **MENU** button on the remote control to call out the OSD menu.
- 2. Go to **Network > DHCP > On**.

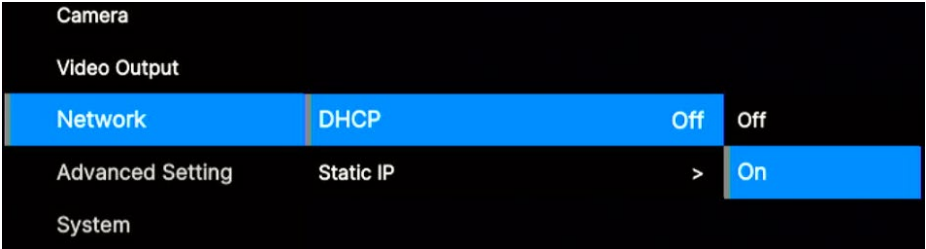

- 3. After turning the DHCP on, the user can go to **System > Information** to view the IP address.

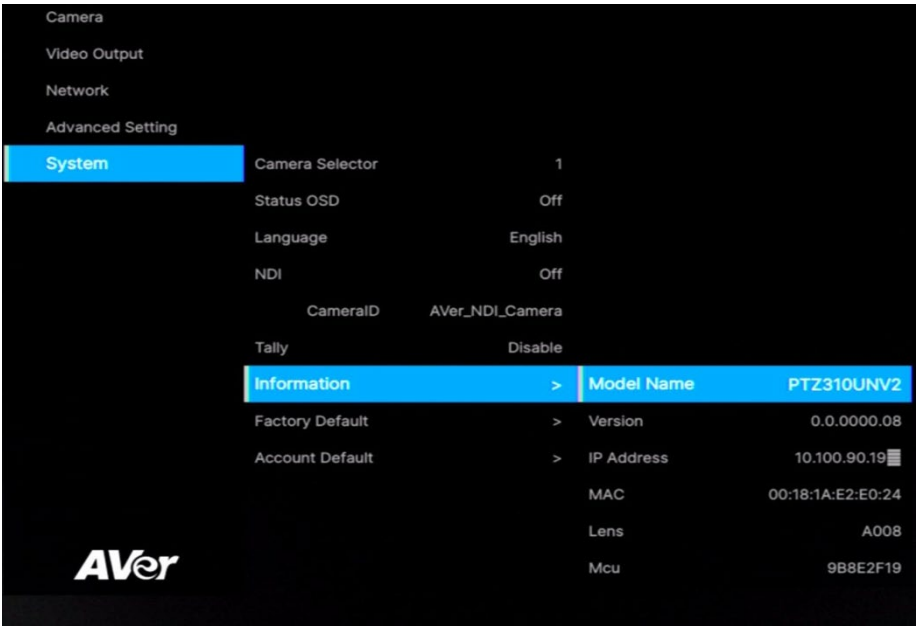

OSD Menu Tree

Camera

Set up camera parameters – Exposure Mode, White Balance, Pan Tilt Zoom, Noise Reduction, Saturation, Contrast, Sharpness, Mirror and Flip.

1 st Layer	2 nd Layer	3 rd Layer	4 th Layer	5 th Layer
Camera	Exposure Mode	Full Auto	Exposure Value	-4/-3/-2/-1/0/1/2/3/4
			Gain Limit Level	24dB/27dB/30dB/33dB/36dB/39dB/42dB
			Slow Shutter	Off/On
		Shutter Priority	Exposure Value	-4/-3/-2/-1/0/1/2/3/4
			Shutter Speed	60Hz: 1/1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/90, 1/100, 1/125, 1/180, 1/250, 1/350, 1/500, 1/725, 1/1000, 1/1500, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000,
				50Hz: 1/1, 1/2, 1/3, 1/6, 1/12, 1/25, 1/50, 1/75, 1/100, 1/120, 1/150, 1/215, 1/300, 1/425, 1/600, 1/1000, 1/1250, 1/1750, 1/2500, 1/3500, 1/6000, 1/10000
			Gain Limit Level	24dB/27dB/30dB/33dB/36dB/39dB/42dB
		Iris Priority	Exposure Value	-4/-3/-2/-1/0/1/2/3/4
			Iris Level	F1.6/F2.0/F2.4/F2.8/ F3.4/F4.0/F4.8/F5.6/F6.8/ F8.0/F9.6/F11/F14/Close
			Gain Limit Level	24dB/27dB/30dB/33dB/36dB/39dB/42dB
			Slow Shutter	On/Off
		Manual	Shutter Speed	60Hz: 1/1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/90, 1/100, 1/125, 1/180, 1/250, 1/350, 1/500, 1/725, 1/1000, 1/1500, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000,

				50Hz: 1/1, 1/2, 1/3, 1/6, 1/12, 1/25, 1/50, 1/75, 1/100, 1/120, 1/150, 1/215, 1/300, 1/425, 1/600, 1/1000, 1/1250, 1/1750, 1/2500, 1/3500, 1/6000, 1/10000
			Iris Level	F1.6 /F2.0/F2.4/F2.8/ F3.4/F4.0/F4.8/F5.6/F6.8/ F8.0/F9.6/F11/F14/Close
			Gain Level	0 dB/3 dB/6 dB/9 dB/12 dB /15 dB/18 dB/21 dB/24dB/ 27dB/30dB/33dB/36dB/39dB /42dB
	White Balance	Bright	0-31	-
		Auto	-	-
		ATW	-	-
		Indoor	-	-
		Outdoor	-	-
		One push	-	-
		Manual	R Gain (0-255)	-
			B Gain (0-255)	-
	Pan Tilt Zoom	Preset Speed	5/25/50/100/150/ 200	-
		Digital Zoom	Off/On	-
		Digital Zoom Limit	-	-
		Pan/Tilt Slow	Off/On	-
	Noise Reduction	Off/Low/Medium/High	-	-
	Saturation	0-10	-	-
	Contrast	0-4	-	-
	Sharpness	0-3	-	-
	Mirror	Off/On	-	-
	Flip	Off/On	-	-

Video Output

Select video resolution (4K (2160p) is available for model names with U only).

1 st Layer	2 nd Layer	3 rd Layer
Video Output	Theme Mode	Standard, ZOOM, Teams, NDI HX3
	Frequency	50 Hz, 59.94 Hz, 60 Hz
	Resolution	2160P/60, 2160P/59, 2160P/50, 2160P/30, 2160P/29, 2160P/25, 1080P/60, 1080P/59, 1080P/50, 1080P/30, 1080P/29, 1080P/25, 1080I/60, 1080I/59, 1080I/50, 720P/60, 720P/59, 720P/50,

Network

Set up IP mode – DHCP or static IP.

1 st Layer	2 nd Layer	3 rd Layer
Network	DHCP	Off/On
	Static IP	IP Address, Gateway, Mask, DNS

Advanced Setting

1 st Layer	2 nd Layer	3 rd Layer	4 th Layer
Advanced Setting	Audio	Input Type	Line In
			MIC In
		Auto Gain Control	Off/On
		Noise Suppression	Off/Low/Normal
		Audio Volume	0-10
	Control	Serial Port	RS-232/RS-422
		Protocol	VISCA/PELCO D/PELCO P
		Camera Address	1-7
		Baud Rate	2400/4800/9600/38400
	SmartShoot	Off/On	
	SmartFrame	Off/On	

System

- **Status OSD:** Enable/disable Preset status (Save Preset, Call Preset, Cancel Preset) display on the screen.
- **Camera Selector:** Set the camera ID 1~3 for using remote control on multiple cameras control (also see No.3 Camera Select in Remote Control chapter).
- **NDI:** Enable/disable NDI function.
- **Tally:** Enable tally function.
- **Account Default:** If you forget your password for the web interface, use Account Default to reset it to **admin/admin**.

1 st Layer	2 nd Layer	3 rd Layer
System	Camera Selector	1-3
	Status OSD	Off/On
	Language	English/繁體中文/日本語/简体中文/한국어/ Tiếng Việt
	NDI	Off/On
		Camera ID
	Tally	Disable/Enable
	Information	Model Name/Version/IP Address/MAC/Lens/Mcu
	Factory Default	Off/On
	Account Default	Off/On

Get Started

Access the Web Interface

To access the web interface of the Matrix Tracking Box, you can use any of the following software to find its IP address:

- AVer IPCam Utility
- AVer PTZ Management

Note:

- The PoE+ port defaults to a static IP address of 192.168.1.168, while the Ethernet port uses DHCP.
- The camera default username and password is admin/admin.

AVer IPCam Utility

AVer IPCam Utility v2.7.1029.34

Network Device

Realtek PCIe GbE Family Controller

Search

Login

User ID

Password

Network Setting

Date/Time Setting

Maintenance

Import/Export Config

Search Result

Select All

No.	Status	Progress	Model Name	Device Name	FW version	IPv4 Address	MAC Address	IPv
☐ 1	Working		TR535	TR535	0.0000.33	10.100.105.56:80	00:18:1a:00:00:00	☐
☐ 2	Working		TR535	AVer	0.0.0000.06	10.100.105.44:80	00:18:1a:01:02:03	☐
☐ 3	Working		TR535	TR535	0.0.0005.05	10.100.105.91:80	00:18:1a:33:12:99	☐
☐ 4	Working		MD330U	MD330U	1.1.0001.0	10.100.105.71:80	00:18:18:18:54:51	☐
☐ 5	Working		AN-VC228A	AN-VC228A	1.1.2030.0	10.100.105.125:80	00:18:1a:09:77:3b	☐
☐ 6	Working		NH720UIS	NH720UIS	1.1.2000.1	10.100.105.17:80	8e:9b:a5:d1:25:0e	☐

Settings

Device Name:

☐ DHCP

☐ Static IP

Start IP Address:

End IP Address:

Subnet Mask:

Gateway:

Primary DNS:

Secondary DNS:

*Auto search will start after settings changed!

☐ Don't start auto search this time!

Apply

To access the web interface:

1. Download IPCam Utility from AVer Download Center (<https://www.aver.com/download-center>) and launch the software.
2. Click **Search** to see available devices on the same local area network (LAN).

Note:

- Make sure your camera has internet.
- IPCam Utility and camera must be on the same LAN.

3. Double-click on your camera's IP address in the **IPv4 Address** column to open the web interface in your browser.

When you log in for the first time:


Change the username and password before logging in to the web interface.

- Username: Use 1-32 characters.
- Password: Use 8-32 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (%+=, - ^/ @ . ~). The password cannot be the same as the username.

To change your network to DHCP or static IP:

1. Select the checkbox of your camera.
2. Enter the default or changed username and password in the **Login** field.
3. Select **DHCP** or **Static IP**, then enter your network settings if applicable in the **Settings** section.
4. Click **Apply**.

AVer PTZ Management

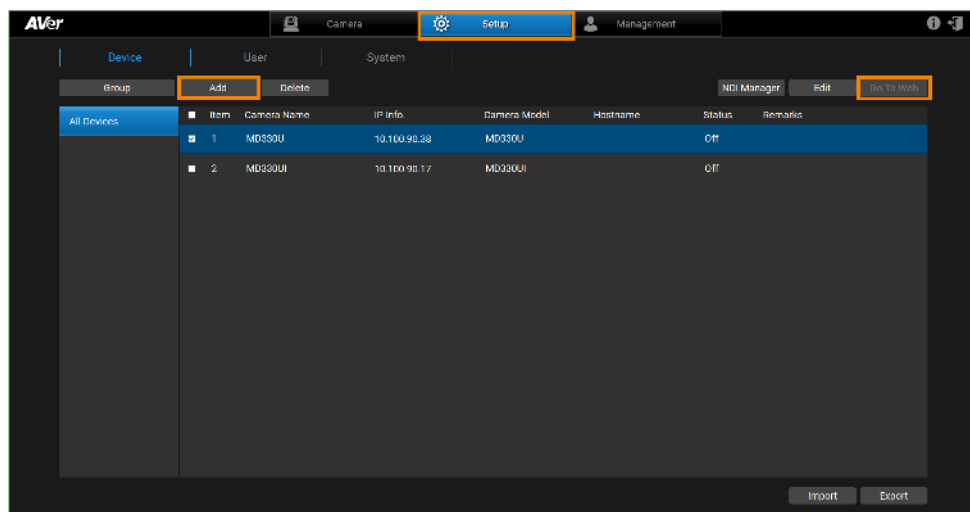


Note: The PTZ Management default username and password is **admin/admin**.


1. Download PTZ Management from AVer Download Center (<https://www.aver.com/download-center>) and launch the software.
2. Log in with the PTZ Management default username and password **admin/admin**.
3. Go to **Setup > Add**, then click **Auto Search** to see available devices on the same local area network (LAN).
4. Click to select your camera, enter the default or changed camera username and password, then click **Save** to add the camera to the device list.
5. Select the checkbox of your camera, then click **Go to Web** button to open the web interface in your browser.

Web Interface

Live View

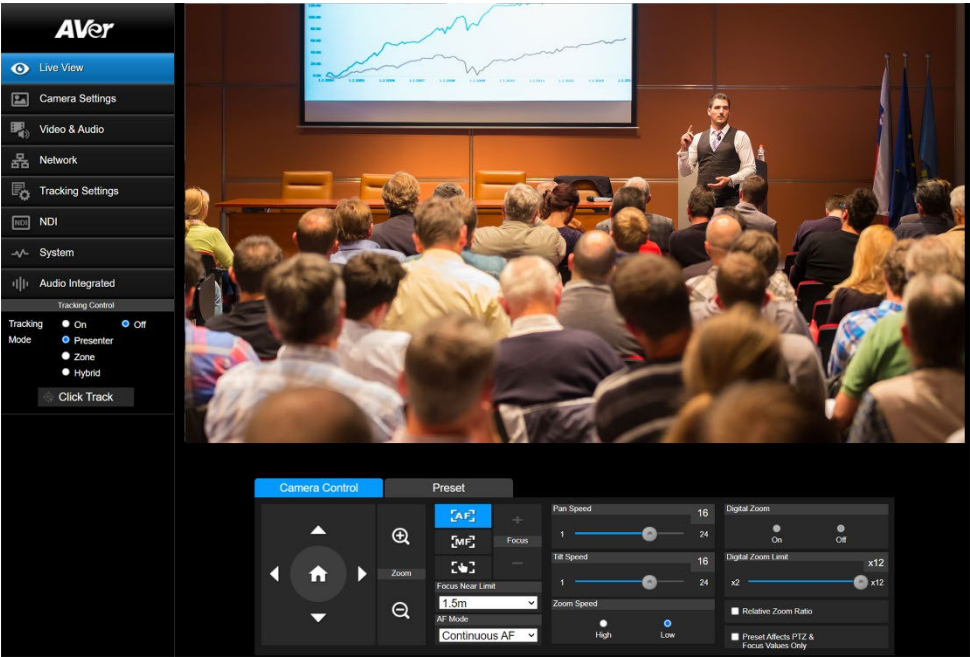


Camera Control

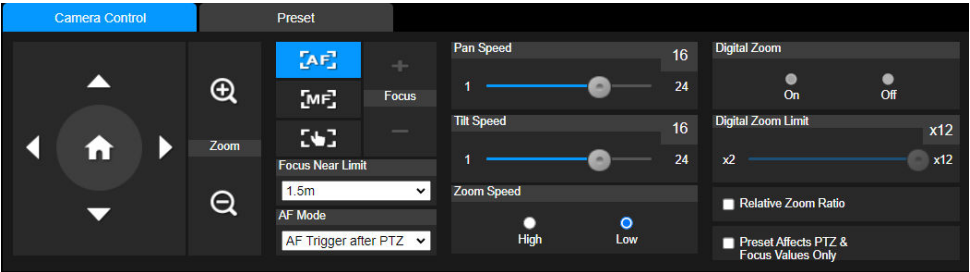

Item	Description
Pan and Tilt Controls	Position the camera. Drag the slider to adjust Pan Speed and Tilt Speed .
Home Position 	Move the camera to the Home position.
Zoom  	Zoom in or zoom out the live view and select Zoom Speed .
Auto Focus 	Select Auto Focus and then choose an AF mode :

	● AF Trigger after PTZ: Automatically focus after each pan, tilt or zoom. ● Continuous AF: Automatically focus continuously.
Manual Focus 	Click to manually focus. Adjust the focus with + - buttons.
One Push Focus 	Click to automatically focus once.
Focus Near Limit	Set up the nearest focus limit.
Digital Zoom	Turn digital zoom on or off.
Digital Zoom Limit	Adjust the digital zoom.
Relative Zoom Ratio	Select to automatically adjust pan and tilt speeds based on the zoom ratio.
Preset Affects PTZ & Focus Values Only	A preset typically includes pan, tilt, zoom, focus, and 3A (autofocus, autoexposure, auto white balance) values. Select to save only pan, tilt, zoom and focus values for presets.

Preset

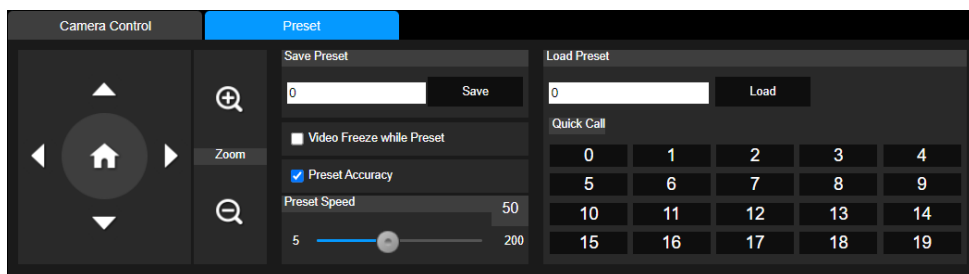


Item	Description
Save Preset	1. Position the camera using pan, tilt and zoom controls. 2. Enter a preset number (0–255) in the Save Preset field and click Save.
Load Preset	1. Enter a preset number (0–255) in the Load Preset field and click Load. 2. Or click a preset number (0–19) in the Quick Call section.
Video Freeze while Preset	Select to display only the live view from presets. The live view from the moving path will not be displayed.
Preset Accuracy	Select to improve the accuracy of moving to presets.
Preset Speed	Adjust the camera speed when moving to presets.
Edit Scenes	To customize camera functions for preset 0–9: 1. Click Edit Scenes. 2. Select Scenes 0–9 from the Scenes List to add up to 10 CGI commands. 3. Select a scene from the Set Scenes drop-down list for each preset.

Camera Settings



Exposure

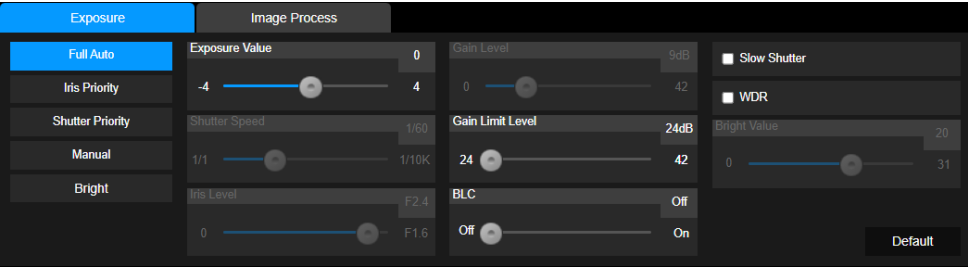


Note: Click **Default** to reset Exposure to factory default settings.

Item	Description
Exposure Mode	Choose an exposure mode.
Exposure Value	Adjust exposure, shutter, iris and gain.
Shutter Speed	
Iris Level	
Gain Level	

Gain Limit Level	
BLC	Turn backlight compensation (BLC), slow shutter, wide dynamic range (WDR) on or off.
Slow Shutter	
WDR	
Bright Value	Drag the slider to adjust the brightness value.


Image Process

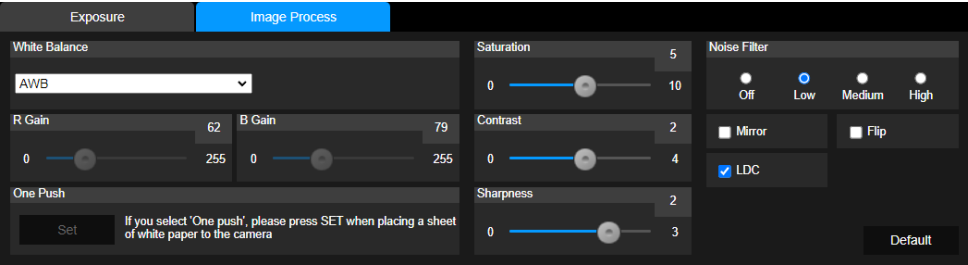

Note: Click **Default** to reset Image Process to factory default settings.

Item	Description
White Balance	Choose a white balance mode ● In Manual mode, you can also adjust the R Gain and B Gain. ● In One Push mode, place a piece of white paper in front of the camera lens and click Set to calibrate white balance.
Saturation	Adjust saturation, contrast and sharpness.
Contrast	
Sharpness	
Noise Filter	Select a noise filtering level.
Mirror	Select the checkbox to flip the image horizontally.
Flip	Select the checkbox to flip the image vertically.

Video & Audio

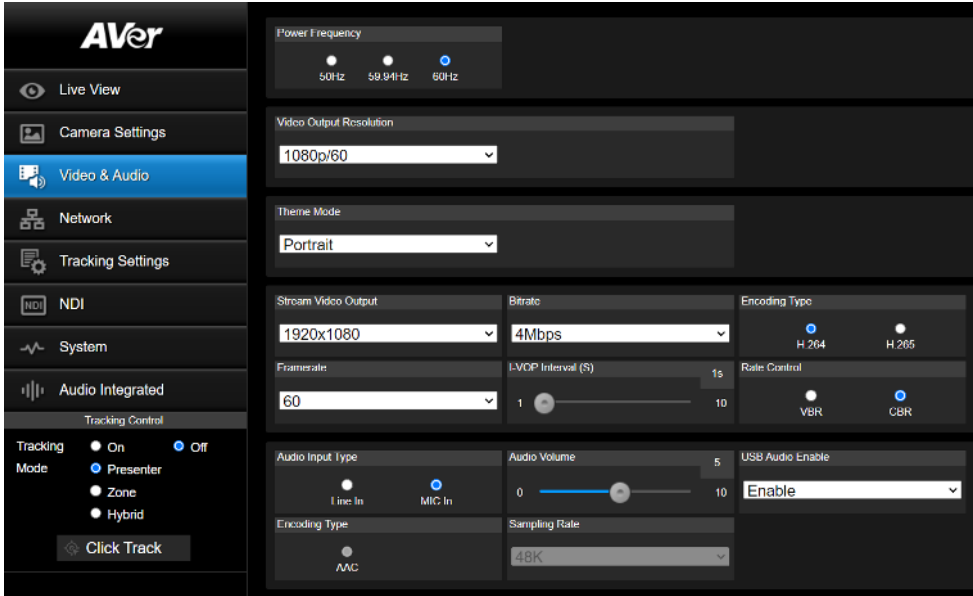

Video and Audio Settings

Item	Description																				
Power Frequency	Select 50Hz , 59.94Hz or 60Hz based on your country and region.																				
Video Output Resolution	Select a resolution to display on your video output device.																				
Theme Mode	Select a video mode based on your output interface. ● NDI is available for model names with N only. ● To stream with NDI HX3, select NDI as the theme mode. <table><tr><th>Mode</th><th>Video Quality</th><th>Output Interface</th><th>Sleep Mode</th></tr><tr><td>Standard</td><td>Standard</td><td>HDMI, SDI, IP, USB, NDI HX2*</td><td>N/A</td></tr><tr><td>Teams</td><td>Teams certified</td><td>HDMI, SDI, IP, USB</td><td>Rotate towards the I/O ports (preset 20)* when not streaming over USB.</td></tr><tr><td>Zoom</td><td>Zoom certified</td><td>HDMI, SDI, IP, USB</td><td>Rotate towards the I/O ports (preset 20)* when not streaming over USB.</td></tr><tr><td>NDI*</td><td>Standard</td><td>HDMI, SDI, IP,</td><td>N/A</td></tr></table>	Mode	Video Quality	Output Interface	Sleep Mode	Standard	Standard	HDMI, SDI, IP, USB, NDI HX2*	N/A	Teams	Teams certified	HDMI, SDI, IP, USB	Rotate towards the I/O ports (preset 20)* when not streaming over USB.	Zoom	Zoom certified	HDMI, SDI, IP, USB	Rotate towards the I/O ports (preset 20)* when not streaming over USB.	NDI*	Standard	HDMI, SDI, IP,	N/A
Mode	Video Quality	Output Interface	Sleep Mode																		
Standard	Standard	HDMI, SDI, IP, USB, NDI HX2*	N/A																		
Teams	Teams certified	HDMI, SDI, IP, USB	Rotate towards the I/O ports (preset 20)* when not streaming over USB.																		
Zoom	Zoom certified	HDMI, SDI, IP, USB	Rotate towards the I/O ports (preset 20)* when not streaming over USB.																		
NDI*	Standard	HDMI, SDI, IP,	N/A																		

	NDI HX3 *To change the sleep mode position, go to System > Sleep to Preset on the web application.
Stream Video Output	Select a stream resolution on live view from the drop-down list.
Bitrate	Select a bitrate from the drop-down list.
Framerate	Select a framerate for live stream – 1, 5, 15, 20 or 30 for power frequency 59.94Hz or 60Hz ; 1, 5, 15, 20 or 25 for power frequency 50Hz .
I-VOP Interval (S)	Drag the slider to set the value from 1s to 10s .
Encoding Type (video)	● Select H.264 or H.265 to encode streaming video.
Rate Control	Select VBR or CBR .
Audio Input Type	Select to input audio by Line in or Mic in .
Audio Volume	Drag the slider to set the volume from 0 to 10 .
Encoding Type (audio)	Select to encode audio.
Sampling Rate	Select a sampling rate from the drop-down list.
USB Audio Enable	Select from the drop-down list to turn on or off the setting.

Network

AVer

Live View

Camera Settings

Video & Audio

Network

Tracking Settings

NDI

System

Audio Integrated

Tracking Control

Tracking Mode: ☒ On ☐ Off

☐ Presenter ☐ Zone ☐ Hybrid

Click Track

DHCP ☒ On ☐ Off

Hostname: PTZ310UNV2

NTP ☒ On ☐ Off

IP Address: Netmask:

Gateway: DNS:

pool.ntp.org

Confirm

RTMP Settings **RTSP Security** **HLS Settings**

Server URL: ☐ On ☒ Off

Stream Key: RTSP Audio Enable: ☒ On ☐ Off

Start Stream STOP

Stream URL:

Start Stream STOP

SRT Settings

Destination IP: 192.168.31.166 Port: 5000 Encryption: None

Latency: 1000 ms Passphrase:

Connect Status: Disconnected

Start Stream STOP

HTTPS ☐ Only ☐ On ☒ Off

Upload Certificate: Choose File No file chosen Upload

Cert Status: None

SSH ☒ On ☐ Off

VMS Port Mode: Default VMS Port Number:

Port: Save

802.1X Enable ☐ On ☒ Off

802.1X Mode: ☐ MD5 ☐ TLS ☐ PEAP

802.1X Setting: Identity: Password:

Client Certificate: Import: No file chosen Upload Private Key Password:

CA Certificate: Import: No file chosen Upload

Confirm

FreeD ☐ On ☒ Off

Camera ID:


FreeD Address: FreeD Port:


FreeD Username: FreeD Password:

FreeD Enable: ☐ On ☒ Off


Confirm

Item	Description
DHCP	Set up the network to DHCP or Static IP. ● DHCP: Select On to assign the related IP settings with the camera automatically. Click Confirm to save the settings. ● Static IP: Select Off to manually enter the IP Address, Netmask, Gateway and DNS. Click Confirm to save the settings.
Hostname	Enter a hostname that is displayed on devices such as an IP router. ● The default is your model name.
NTP	Turn Network Time Protocol (NTP) on or off.
RTMP Settings	Stream camera live video to a video platform such as YouTube.

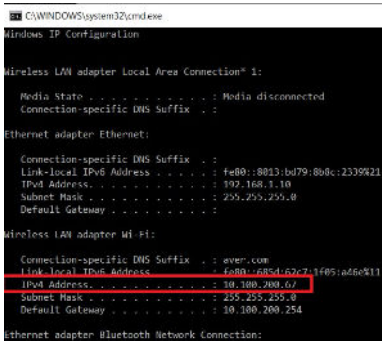	1. Enter the Server URL and Stream Key of the platform. Please refer to the instruction of the platform you use to obtain the server URL and stream key. 2. Click Start Stream to start streaming, 3. Click Stop to stop streaming.
RTSP Security	Protect your video stream on media players such as VLC, PotPlayer and QuickTime by ensuring that only authorized users can access it. ● When Security is turned off: 1. Enter your camera's RTSP URL into the media player. 2. RTSP URL: rtsp://[camera IP address]/live_st1 Example: rtsp://192.168.1.100/live_st1 ● When Security is turned on: 1. Enter your camera's RTSP URL, username and password into the media player. 2. RTSP URL: rtsp://[username:password]@[camera IP address]/live_st1 Example: rtsp://1:1@192.168.1.100/live_st1 3. Username and password: camera's web interface login.
HLS Settings	Configure HTTP Live Streaming (HLS) settings to provide adaptive bitrate streaming, which ensures smooth playback and minimizes buffering. 1. Enter the stream URL obtained from the streaming service or server. 1. Click Start Stream to start streaming, Stop to stop streaming.
SRT Settings	● vMix 1. Make sure the vMix workstation and your camera are on same network. Copy the workstation's IP address.  <pre> C:\WINDOWS\system32\cmd.exe Windows IP Configuration Wireless LAN adapter Local Area Connection* 1: Media State : Media disconnected Connection-specific DNS Suffix . : Ethernet adapter Ethernet: Connection-specific DNS Suffix . : Link-local IPv6 Address : fe80::8013:bd79:808c:239921 IPv4 Address. : 192.168.1.10 Subnet Mask : 255.255.255.0 Default Gateway : Wireless LAN adapter Wi-Fi: Connection-specific DNS Suffix . : ever.com Link-local IPv6 Address : fe80::685d:62c7:1405:a56e911 IPv4 Address. : 10.100.200.67 Subnet Mask : 255.255.255.0 Default Gateway : 10.100.200.254 Ethernet adapter Bluetooth Network Connection: </pre> 2. Go to Stream tab > select SRT (Listener) from the Stream Type drop-down list. Copy the Port value.

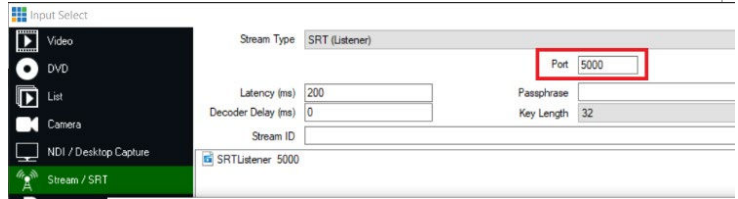

3. Paste the IP address and Port value into **SRT Settings** fields and click **Start Stream**. **Connect Status** will change to **Connected**.

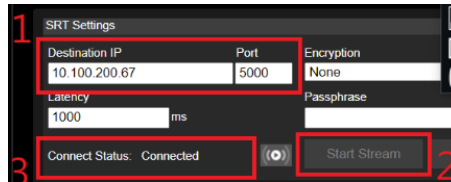


- OBS (Open Broadcaster Software)

1. Make sure the OBS workstation and your camera are on same network. Copy the workstation's IP address.

```
Connection-specific DNS Suffix . : aver.com
Link-local IPv6 Address . . . . . : fe80::f1dc:bcd8:87bd:ac1e%12
IPv4 Address. . . . . : 10.100.105.127
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 10.100.105.254
```

2. Open OBS. Add a scene and a source.
3. Enter "srt://[Workstation IP]:[port]?mode=listener" in the **Input** field.
Example: srt://10.100.105.127:8889?mode=listener

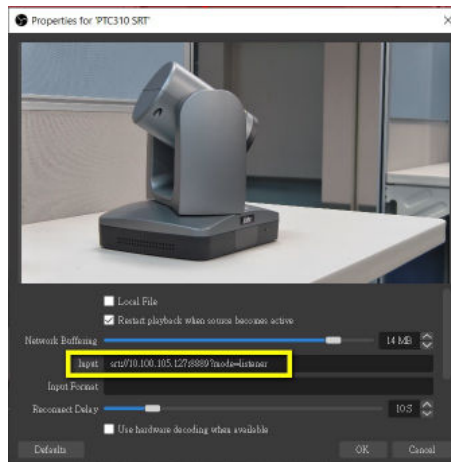


4. If there is no image, right-click on the source > **Transform** > **Fit to screen** to re-scale image.

HTTPS

Enable HTTPS to establish a secure connection between your browser and

	your camera. To enable HTTPS access on your camera: 1. Obtain a SSL certificate for encryption and decryption in base-64 encoded format and use a private key in PKCS#8 format (unencrypted). 2. Package the required certificate content into PEM format. The SSL certificate uploaded to the camera must be in PEM format. 3. Click Choose File to select the certificate file, and then click Upload. 4. Turn on HTTPS.
SSHD	Turn remote debugging from AVer on or off.
Visca Port Mode	Select a VISCA port mode. After selected, enter Visca Port Number.
802.1x Enable	Turn 802.1x Enable on or off.


Advanced Setting

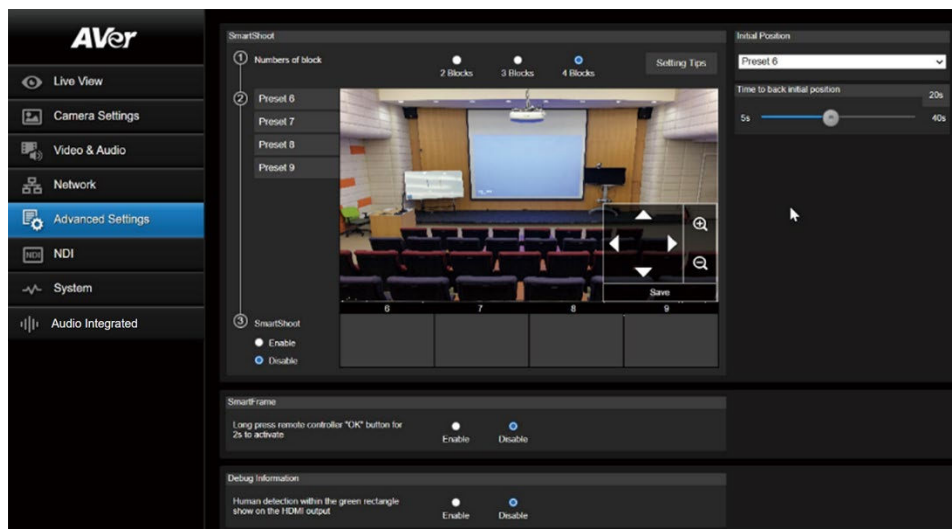


SmartShoot

Setup the block area for the camera to detect object and follow-up the object to move the camera when the object is in block area that user has set.


1. In the advanced setting interface, select the **Number of block** (2, 3, or 4). Each block is corresponding to one preset position. The maximum is 4 blocks (4 preset positions).

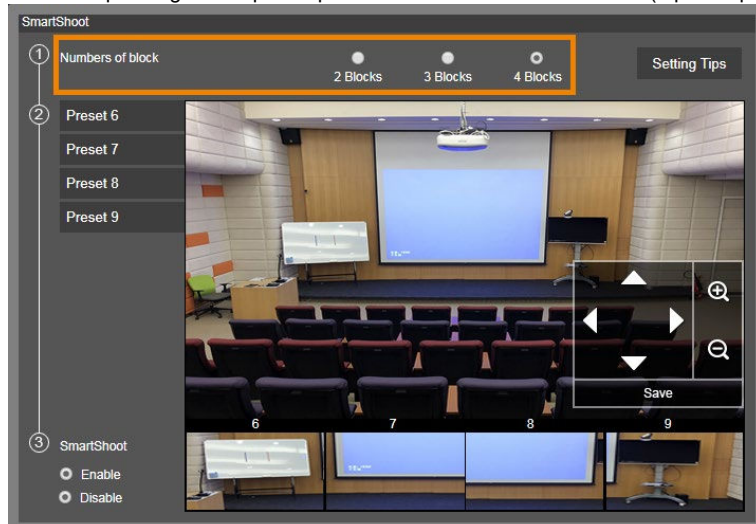

- Set the preset positions in order (Preset 6 to Preset 9). Use direction control panel to move the camera to wanted position and select “save” to save the preset position. And, a snapshot of the preset image will show at corresponding image display box. Repeat the step to set another preset position.

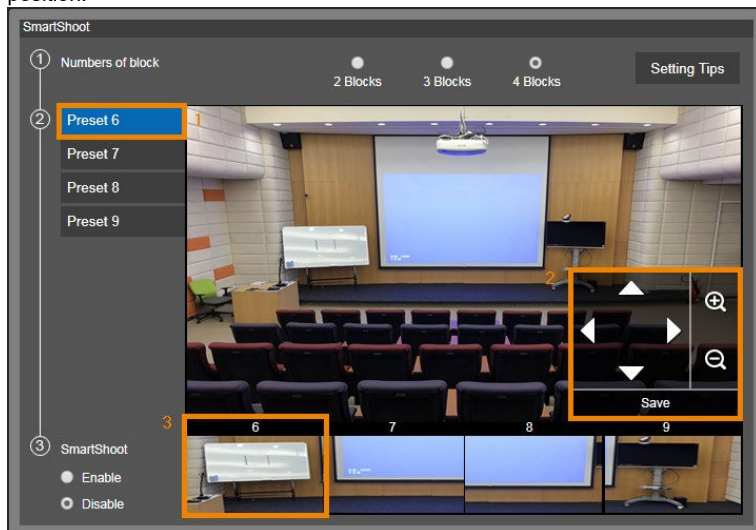


- Set the **Initial Position** and **Time to back initial position**. The camera will go back to initial position based on the time set at Time to back initial position.

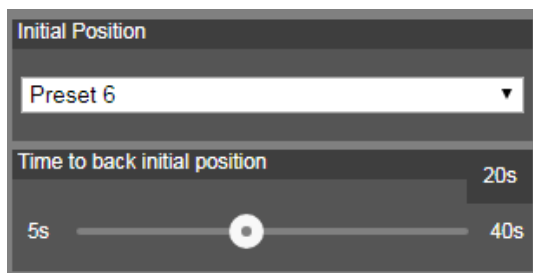

- Select **Enable** to turn on SmartShoot. Or turn on SmartShoot in the OSD menu: **Advanced Setting > SmartShoot > On**.

SmartFrame

Press  button on the remote control to enable to auto focus the face of object and zoom in.
Select **Enable** to turn on SmartFrame.




Debug Information

Select **Enable**, and the human detection within the green rectangle will show on the HDMI output.

NDI

Note: NDI is available for model names with N only.

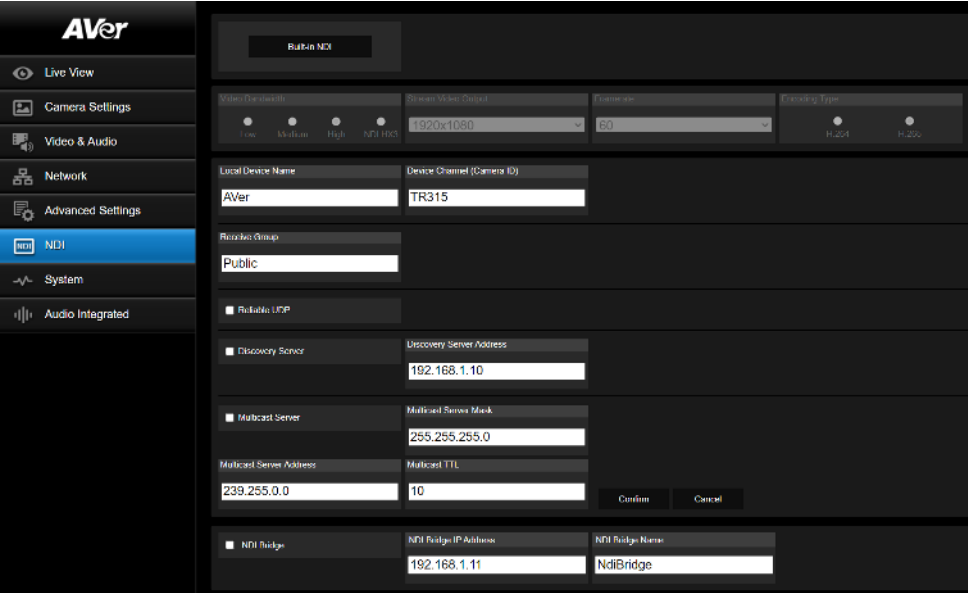

Item	Description
Video Bandwidth	Select a bandwidth. NDI HX3 is a protocol that enables high-quality video streaming over IP networks.
Stream Video Output	Choose a streaming output resolution for the live view. 4K (2160p) is available for model names with U only.
Framerate	Choose a framerate.
Encoding Type	Select H.264 or H.265 .
Local Device Name	Enter a name that identifies your camera group on the NDI software. ● The default is AVer.
Device Channel (Camera ID)	Enter a name that identifies your camera on the NDI software. ● The default is your model name. ● A name must have no more than 10 characters. Use number, upper and lower case letter, or special character (! @ % ^ , . / : + ? [] { } - _ ~).
Receive Group	Enter a name for a receive group. ● All devices in the receive group receive the same NDI streams. ● The receive group should remain public. If this is changed, you will need to join the group through NDI® Access


	Manager.
Reliable UDP	Select the checkbox to enable Reliable User Datagram Protocol (RUDP).
Discovery Server	Select the checkbox to enable discovery server to allow devices to discover and connect to each other on a network automatically.
Discovery Server Address	Enter the IP address of a server running a discovery server application.
Multicast Server	Select the checkbox to enable multicast server to allow efficient distribution of NDI streams to multiple receivers without overwhelming the network.
Multicast Server Mask	Enter the network mask to specify the range of IP addresses that are eligible to receive NDI streams.
Multicast Server Address	Enter the IP address of a group of recipients that receive NDI streams from a multicast server.
Multicast TTL	Enter a multicast time to live (TTL) value between 1-255 to control the distance multicast packets can travel.

System

Item	Description
Upgrade Firmware	To upgrade the firmware: 1. Download the latest firmware from AVer Download Center (https://www.aver.com/download-center). 2. On the web interface, go to System > Upgrade firmware. 3. Click Browse to select the firmware. 4. Click Upgrade. 5. Refresh the browser after the upgrade is complete. Note: Keep your camera connected to a power source during firmware upgrade. Network connection will be lost during the process and camera will reboot automatically after upgrading.
Factory Default	Reset the camera to factory default settings.
Login	For first-time login, you'll be prompted to change the username and Password: ● Username: Use 1-32 characters. ● Password: Use 8-32 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (%+=, _ ^/ @. ~). The password cannot be the same as the username.

Language	Change the web interface language.
Reboot	Restart your camera.
Set Date/Time	Set the camera date and time.
Power Schedule	Schedule specific times for the camera to reboot or shut down.
Syslog	Turn on to receive technical supports. Enter the IP Address and Port of the receiving device for debug and problem analysis.
Status OSD	Enable to display preset, zooming, SmartShoot and SmartFrame status on HDMI output.
Setting	Export or import your camera settings
Status Live View	Turn the camera live view on or off.
Export Log	Export system log.
Power Up to Preset	Move the camera to the defined preset after powering on. To enable: 1. Make sure the preset has been defined. 2. Select Power Up to Preset > enter a preset number > click Save .
Power Off to Preset	Move the camera to the defined preset before powering off. To enable: 1. Make sure the preset has been defined. 2. Select Power Off to Preset > enter a preset number > click Save .
VISCA Customized Function	Set VISCA customized functions and click OK .
Sleep to Preset	When no video is transmitted over USB on Zoom or Teams, set up Sleep to Preset and Sleep Timer to move the camera to a defined preset after a period of time for enhanced privacy. ● To enable: 1. Make sure the preset has been defined. 2. Go to Video & Audio > Theme Mode > choose Zoom or Teams . 3. Go to Systems > Sleep to Preset > choose a preset. 4. Go to Systems > Sleep Timer > select a duration. ● To disable, choose Off from the Sleep to Preset drop-down list or select Off in Sleep Timer .
Sleep Timer	
Help Improving AVer Camera	Opt-in or opt-out of providing anonymous usage data.
LED Indicator Brightness	Drag the slider to adjust the brightness.
Camera Selector	Assign a number to the camera which corresponds with the Camera Select on the remote control.

Audio Integrated

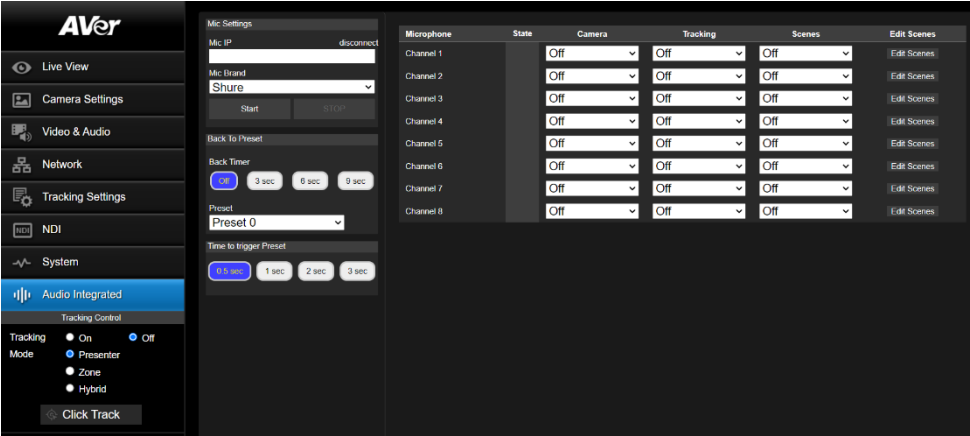

Item	Description
Mic Settings	Enter the microphone IP you want to connect. Click Start to connect and Stop to disconnect.
Back to Preset	Select an idle time before the camera goes to your selected preset.
Time to trigger Preset	Select an idle time for the camera to move to the preset when the microphone detects sound.
Mic Manager	● Pair microphone channels with presets. ● Turn tracking on or off for each channel. ● Customize camera functions and add up to 10 CGI commands for each channel.

Appendix

VISCA RS-232 Command Table

Command Set	Command	Command Packet	Comments
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	p=0 (Low) to 7 (High)
	Tele(Variable)	8x 01 04 07 2p FF	
	Wide(Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position , PTC310: 0x0000~0x6f20 PTC330: 0x0110~0x5490
CAM_Focus	Stop	8x 01 04 08 00 FF	Each 'Far/Near' needs a 'stop'
	Far (Standard)	8x 01 04 08 02 FF	
	Near (Standard)	8x 01 04 08 03 FF	
	Auto Focus	8x 01 04 38 02 FF	
	Manual Focus	8x 01 04 38 03 FF	
	One Push	8x 01 04 18 01 FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	ATW	8x 01 04 35 04 FF	
	Indoor	8x 01 04 35 01 FF	
	Outdoor	8x 01 04 35 02 FF	
	One Push WB	8x 01 04 35 03 FF	One Push WB mode
	Manual	8x 01 04 35 05 FF	Manual Control mode
	One Push	8x 01 04 10 05 FF	One Push WB Trigger
CAM_RGain	Up	8x 01 04 03 02 FF	Manual Control of R Gain
	Down	8x 01 04 03 03 FF	
CAM_Bgain	Up	8x 01 04 04 02 FF	Manual Control of B Gain
	Down	8x 01 04 04 03 FF	
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode

Command Set	Command	Command Packet	Comments
	Bright	8x 01 04 39 0D FF	Bright Mode (Manual control)
CAM_Shutter	Up	8x 01 04 0A 02 FF	Shutter Setting
	Down	8x 01 04 0A 03 FF	
CAM_Iris	Up	8x 01 04 0B 02 FF	Iris Setting
	Down	8x 01 04 0B 03 FF	
CAM_Gain	Up	8x 01 04 0C 02 FF	Gain Setting
	Down	8x 01 04 0C 03 FF	
CAM_Bright	Up	8x 01 04 0D 02 FF	Bright Setting
	Down	8x 01 04 0D 03 FF	
CAM_Exposure Comp.	Up	8x 01 04 0E 02 FF	Exposure Compensation Amount Setting
	Down	8x 01 04 0E 03 FF	
CAM_Backlight	On	8x 01 04 33 02 FF	Back Light Compensation ON/OFF
	Off	8x 01 04 33 03 FF	
CAM_Preset	Reset	8x 01 04 3F 00 pp FF	pp: Preset Number 0x00~0xFF
	Set	8x 01 04 3F 01 pp FF	
	Recall	8x 01 04 3F 02 pp FF	
CAM_Menu	On/Off	8x 01 06 06 10 FF	Display ON/OFF
Pan-tilt Drive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan speed setting 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed setting 0x01 (low speed) to 0x18 (high speed)
	Down	8x 01 06 01 VV WW 03 02 FF	
	Left	8x 01 06 01 VV WW 01 03 FF	
	Right	8x 01 06 01 VV WW 02 03 FF	
	UpLeft	8x 01 06 01 VV WW 01 01 FF	
	UpRight	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
CAM_WDR	On	8x 01 04 3D 02 FF	Wdr ON/OFF
	Off	8x 01 04 3D 03 FF	
CAM_MenuEnter		8x 01 7E 01 02 00 01 FF	Enter Submenu
Tally Lamp	ON (Red)	8x 01 7E 01 0A 00 02 FF	
	OFF	8x 01 7E 01 0A 00 03 FF	
	ON (Green)	8x 01 7E 01 0A 00 04 FF	

Command Set	Command	Command Packet	Comments
	ON (Amber)	8x 01 7E 01 0A 00 05 FF	
Freeze	Freeze On	81 01 04 62 02 FF	Freeze On Immediately
	Freeze Off	81 01 04 62 03 FF	Freeze Off Immediately
	Preset Freeze On	81 01 04 62 22 FF	Freeze On When Running Preset
	Preset Freeze Off	81 01 04 62 23 FF	Freeze Off When Running Preset
CAM_Memory Special	Set	8x 01 04 3F 01 pp FF	These are changeable depending on VISCA Customized Functions web setting: pp: 0x00 To 0xFF normal preset pp: 0x5F => Trun on OSD menu pp: 0xA0 => Full Body pp: 0xA1 => Upper Body pp: 0xA2 => Tracking Point pp: 0xA3 => Switch pp: 0xA4 => Presenter mode (supported in FW v25 or newer) pp: 0xA5 => Zone mode (supported in FW v25 or newer) pp: 0xA6 => Hybrid mode (supported in FW v35 or newer) pp: 0x5A => SmartFrame Enable pp: 0x5B => SmartFrame Disable pp: 0x5C => SmartFrame Trigger pp: 0x5D => SmartShoot Enable pp: 0x5E => SmartShoot Disable

Command Set	Command	Command Packet	Comments
Absolute Position	Set	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	VV: Pan speed setting 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed setting 0x01 (low speed) to 0x18 (high speed) YYYY: Pan Position ZZZZ: Tilt Position
RTMP	On	8x 01 04 A2 02 FF	
	Off	8x 01 04 A2 03 FF	
Video mode	Standard	8x 01 04 A3 00 FF	
	ZOOM	8x 01 04 A3 01 FF	
	Teams	8x 01 04 A3 02 FF	
	NDI	8x 01 04 A3 03 FF	
Reboot	On	8x 01 04 A4 FF	
Preset Affects PTZ & Focus Values Only	On	8x 01 04 A5 02 FF	
	Off	8x 01 04 A5 03 FF	
Relative Zoom Ratio	On	8x 01 04 A6 02 FF	
	Off	8x 01 04 A6 03 FF	

Inquiry Command	Command Packet	Reply Command Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_WBModelInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	In Door
		y0 50 02 FF	Out Door
		y0 50 03 FF	One Push WB
		y0 50 04 FF	ATW
		y0 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority
		y0 50 0B FF	Iris Priority
		y0 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_FocusModelInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
zoom_Pos_Inq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
PT_Pos_Inq	8x 09 06 12 FF	y0 50 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	YYYY: Pan Position ZZZZ: Tilt Position
CAM_Preset Inq	8x 09 04 3F FF	y0 50 pp FF	Return the last preset number which has been operated pp:01-FF
CAM_OSD MENU on/off	8x 09 7E 04 76 01 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_Tally	8x 09 7E 01 0A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_WDR mode	8x 09 04 3D FF	y0 50 02 FF	On

Inquiry Command	Command Packet	Reply Command Packet	Comments
		y0 50 03 FF	Off
CAM_BLC mode	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_Live Freeze	8x 09 04 62 01 FF	y0 50 02 FF	Freeze On
		y0 50 03 FF	Freeze Off
CAM_Preset Freeze	8x 09 04 62 02 FF	y0 50 02 FF	Preset Freeze On
		y0 50 03 FF	Preset Freeze Off
Firmware version	8x 09 36 69 04 FF	y0 50 0p 0q 0r 0s 0t 0u 0v 0w FF	fw_ver: p.q.rstu.vw
USB Status	8x 09 36 69 05 FF	y0 50 00 FF	USB cable plug out
		y0 50 01 FF	USB cable plug in
UVC Status	8x 09 36 69 06 FF	y0 50 00 FF	UVC stream off
		y0 50 01 FF	UVC stream on

Visca over IP Settings

PORT

Internet protocol	IPv4
Transport protocol	UDP
Port address	52381

FORMAT

	byte 0	byte 1	byte 2	byte 3	byte 4	byte 5	byte 6	byte 7	byte8 ~~~ byte23
func	Payload type		Payload length	Sequence number					Payload (1 to 16 bytes)
data	Value1	Value2	1~16 (0x0001~0x0010)	0X00000000 ~ 0XFFFFFFF					VISCA Packet (see page VISCA)

Payload type

Name	Value1	Value2	Description
VISCA command	0x01	0x00	Stores the VISCA command.
VISCA inquiry	0x01	0x10	Stores the VISCA inquiry.
VISCA reply	0x01	0x11	Stores the reply for the VISCA command or VISCA inquiry

CGI Command

CGI List for Video Transmission					
CGI item name	URL	Command	Parameter Name	Parameter value	Description
Get JPEG	/snapshot				1280x720 jpg
Get RTSP stream	rtsp://ip/live_st1				
Get MJPG	http://IP/html/live.html				

CGI List for Camera Control					
CGI item name	URL	Command	Parameter Name	Parameter value	Description
up start	/cgi-bin?SetPtzf=	1,0,1&(random)			
up end	/cgi-bin?SetPtzf=	1,0,2&(random)			
down start	/cgi-bin?SetPtzf=	1,1,1&(random)			
down end	/cgi-bin?SetPtzf=	1,1,2&(random)			
left start	/cgi-bin?SetPtzf=	0,1,1&(random)			
left end	/cgi-bin?SetPtzf=	0,1,2&(random)			
right start	/cgi-bin?SetPtzf=	0,0,1&(random)			
right end	/cgi-bin?SetPtzf=	0,0,2&(random)			
zoom_in start	/cgi-bin?SetPtzf=	2,0,1&(random)			
zoom_in end	/cgi-bin?SetPtzf=	2,0,2&(random)			
zoom_out start	/cgi-bin?SetPtzf=	2,1,1&(random)			
zoom_out end	/cgi-bin?SetPtzf=	2,1,2&(random)			
set preset:	/cgi-bin?ActPreset=	1,N&(random)			N : position
load preset:	/cgi-bin?ActPreset=	0,N&(random)			N : position
set preset speed	/cgi-bin?Set=preset_speed,3,val	val: {min: 1, max: 6}			
Absolute Position (Pan)	/cgi-bin?Set=ptz_p,3,val	val: {min: 2048, mid: 962944, max: 1925888}			Follows CGI preset speed
Absolute Position (Tilt)	/cgi-bin?Set=ptz_t,3,val	val: {min: 2048, mid: 165696, max: 662784}			Follows CGI preset speed

Absolute Position (Zoom)	/cgi-bin?Set=ptz_z,3, val	val: {min: 2048, mid: 14224, max: 28448}			Follows CGI preset speed
--------------------------	---------------------------	--	--	--	--------------------------

CGI List for Various Settings					
exposure value	/cgi-bin?Set=	img_expo_expo,3,N&(random)	value	1 ~ 9	N : value
saturation	/cgi-bin?Set=	img_saturation,3,N&(random)	value	0 ~ 10	N : value
contrast	/cgi-bin?Set=	img_contrast,3,N&(random)	value	0 ~ 4	N : value
Reboot	GET(Basic Authentication)	/cgi-bin?OnePush=!			
Factory Reset	GET(Basic Authentication)	/cgi-bin?OnePush=d			
RTMP Start streaming	/cgi-bin?Set=	vdo_rtmp_enable,3,1			
RTMP Stop streaming	/cgi-bin?Set=	vdo_rtmp_enable,3,0			
Save RTMP server URL		/cgi-bin?SaveRtmpUrl=		value empty for clearing up the field	
Save RTMP stream Key		/cgi-bin?SaveRtmpKey=		value empty for clearing up the field	
Inquiry for RTMP status		/cgi-bin?Get=vdo_rtmp_status		Streaming: vdo_rtmp_status=2 Stopped: vdo_rtmp_status=0	
Get RTMP server URL		/cgi-bin?GetRtmpUrl			
Get RTMP stream key		/cgi-bin?GetRtmpKey			
USB status	GET(Basic Authentication)	/cgi-bin?Get=usb_status_inquire,3			
	- Reply	"usb_status_inquire,3=X\r\n"	X: 0(plug out), 1(plug in)		
UVC status	GET(Basic Authentication)	/cgi-bin?Get=uvc_status_inquire,3			
	- Reply	"uvc_status_inquire,3=X\r\n"	X: 0(stream off), 1(stream on)		
Status get (Model name & mac & FW_VER)		/cgi-bin?SetString=sys_name&net_mac&sys_fw_version&_=1635216271678		http://10.100.105.110/cgi-bin?GetString=sys_name&net_mac&sys_fw_version&_=1635216271678	

Serial No. get		/cgi-bin?GetSerialNumber&_=1635216271680		http://10.100.105.110/cgi-bin?GetSerialNumber&_=1635216271680	
script (Using cURL to update firmware)	curl.exe -X POST --user NAME:PASSWORD -F file1=@./ISP_FILE "http://IP_ADDRESS/system/"			Please download curl (curl for Windows), this is a command line tool for network transferring. Put curl.exe and ISP file in the same folder. and then execute the script to upgrade camera. For example, ISP file is 0.0000.29.dat , IP address is 10.100.105.109 and username:password is 1:1 , you can enter this script to execute ISP process. curl.exe -X POST --user 1:1 -F file1=@./0.0.0000.29.dat "http://10.100.105.109/system/"	